


Diagram #5010

Repair Harness w/ BYPASS Plug

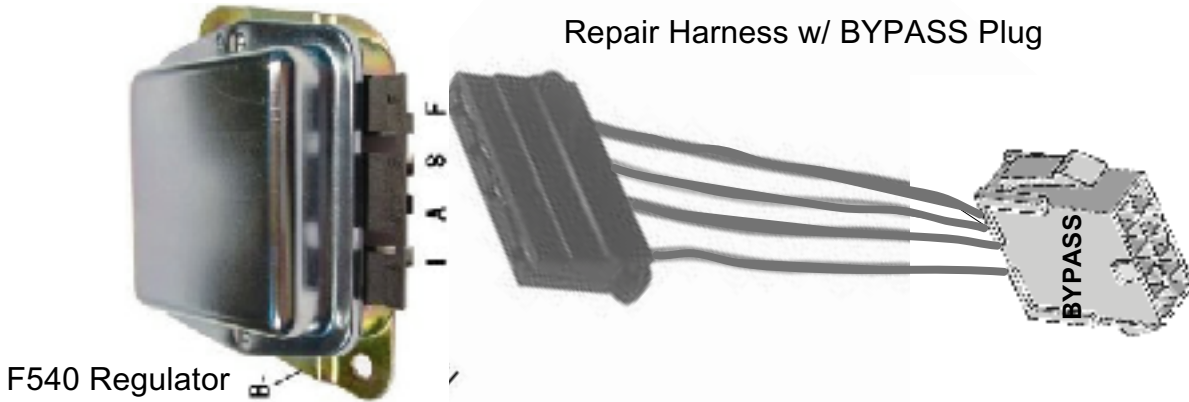

External regulator should be installed close to the MOBI-ARC Control Unit and must be grounded. Under normal conditions, it will not be used. Should the control unit fail, or if the control unit is removed, use the repair harness and BYPASS Plug located in the BYPASS Kit and follow the instructions.

