


Diagram #6020

NOTE: Not all wires from the 10-pin harness will be used.

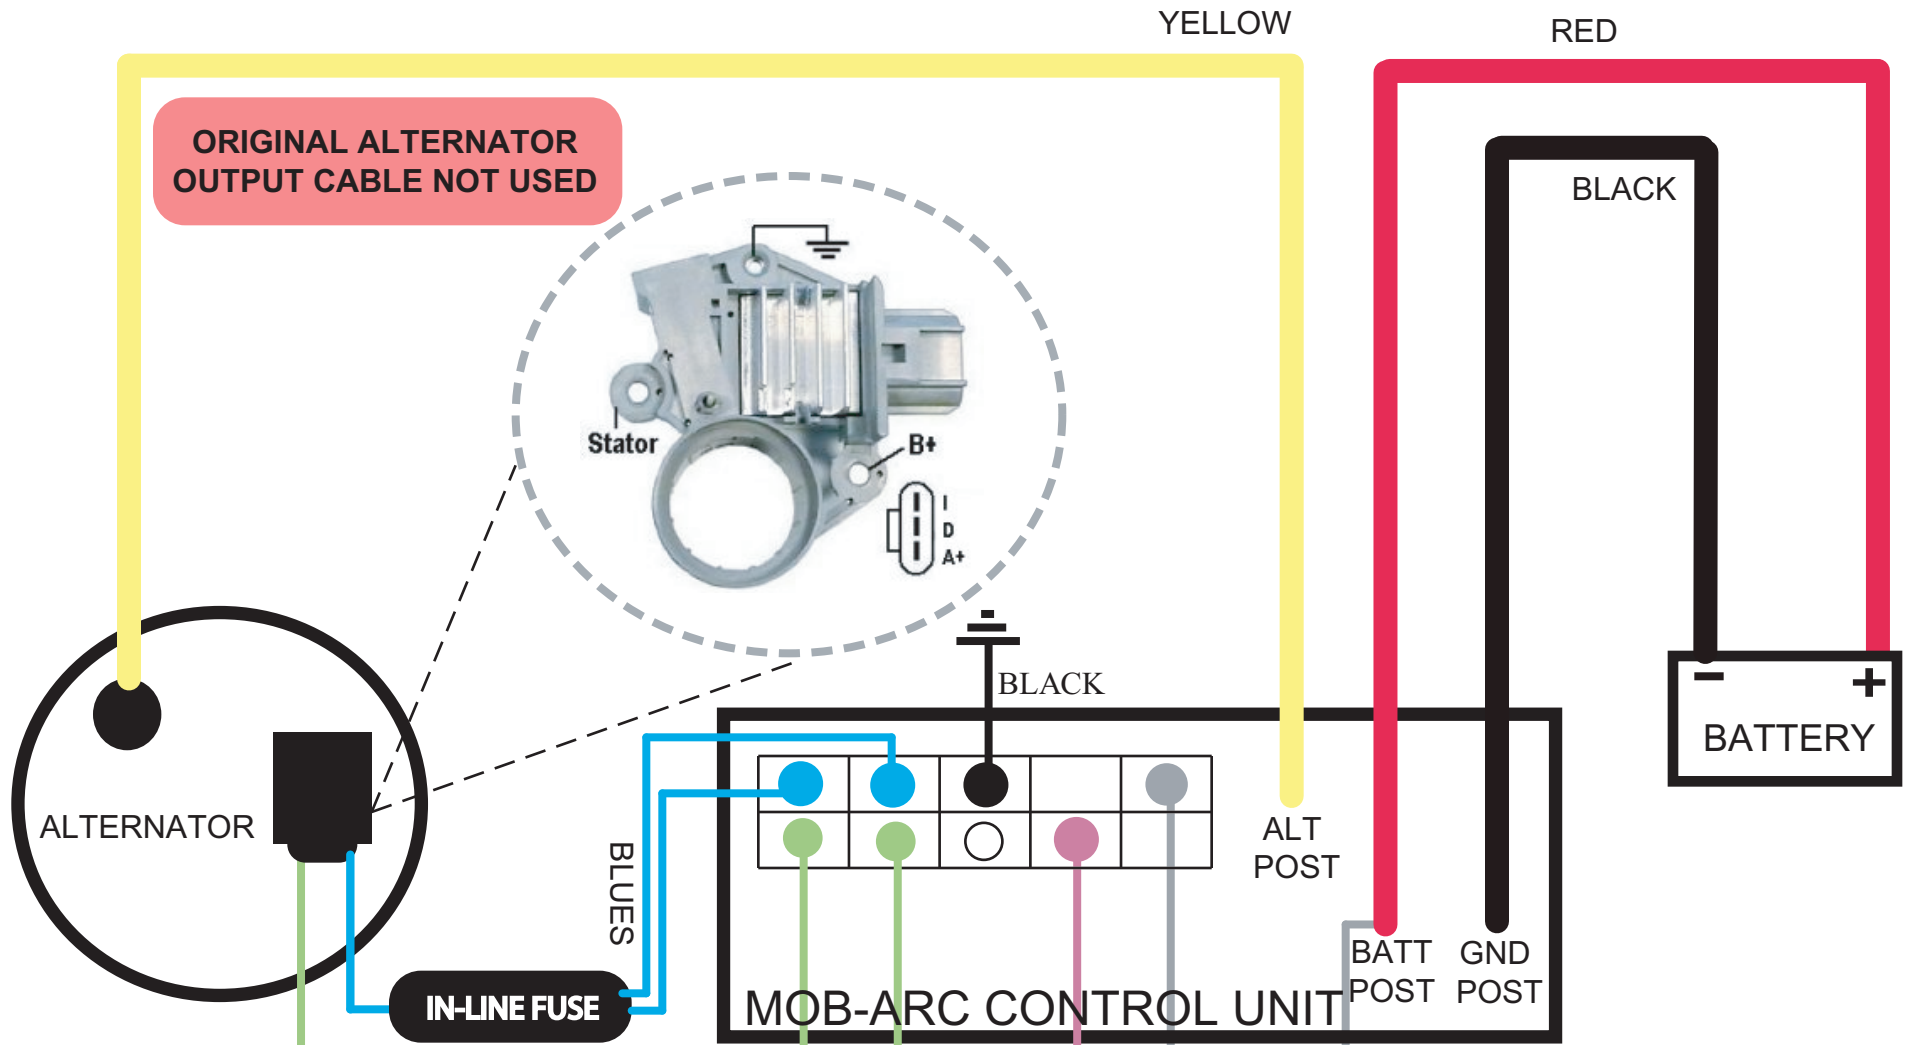

Ford 6-G
Use 6-G Dummy Regulator/Brush-holder Module.
Brushes Isolated Bypass Kit

