Diagram #6010

On regulator:	I	Alternator warning light or nothing
(If not on a Ford)	S	Stator (stator connector on alternator)
	A	Switched 12 volts

If the Ford 3-G alternator is not installed on a vehicle with a 3-G alternator harness, a repair harness has been provided. Join the "I" and "A" wires together and connect to switched 12 volts. The "S" wire (located in the middle) is not used.

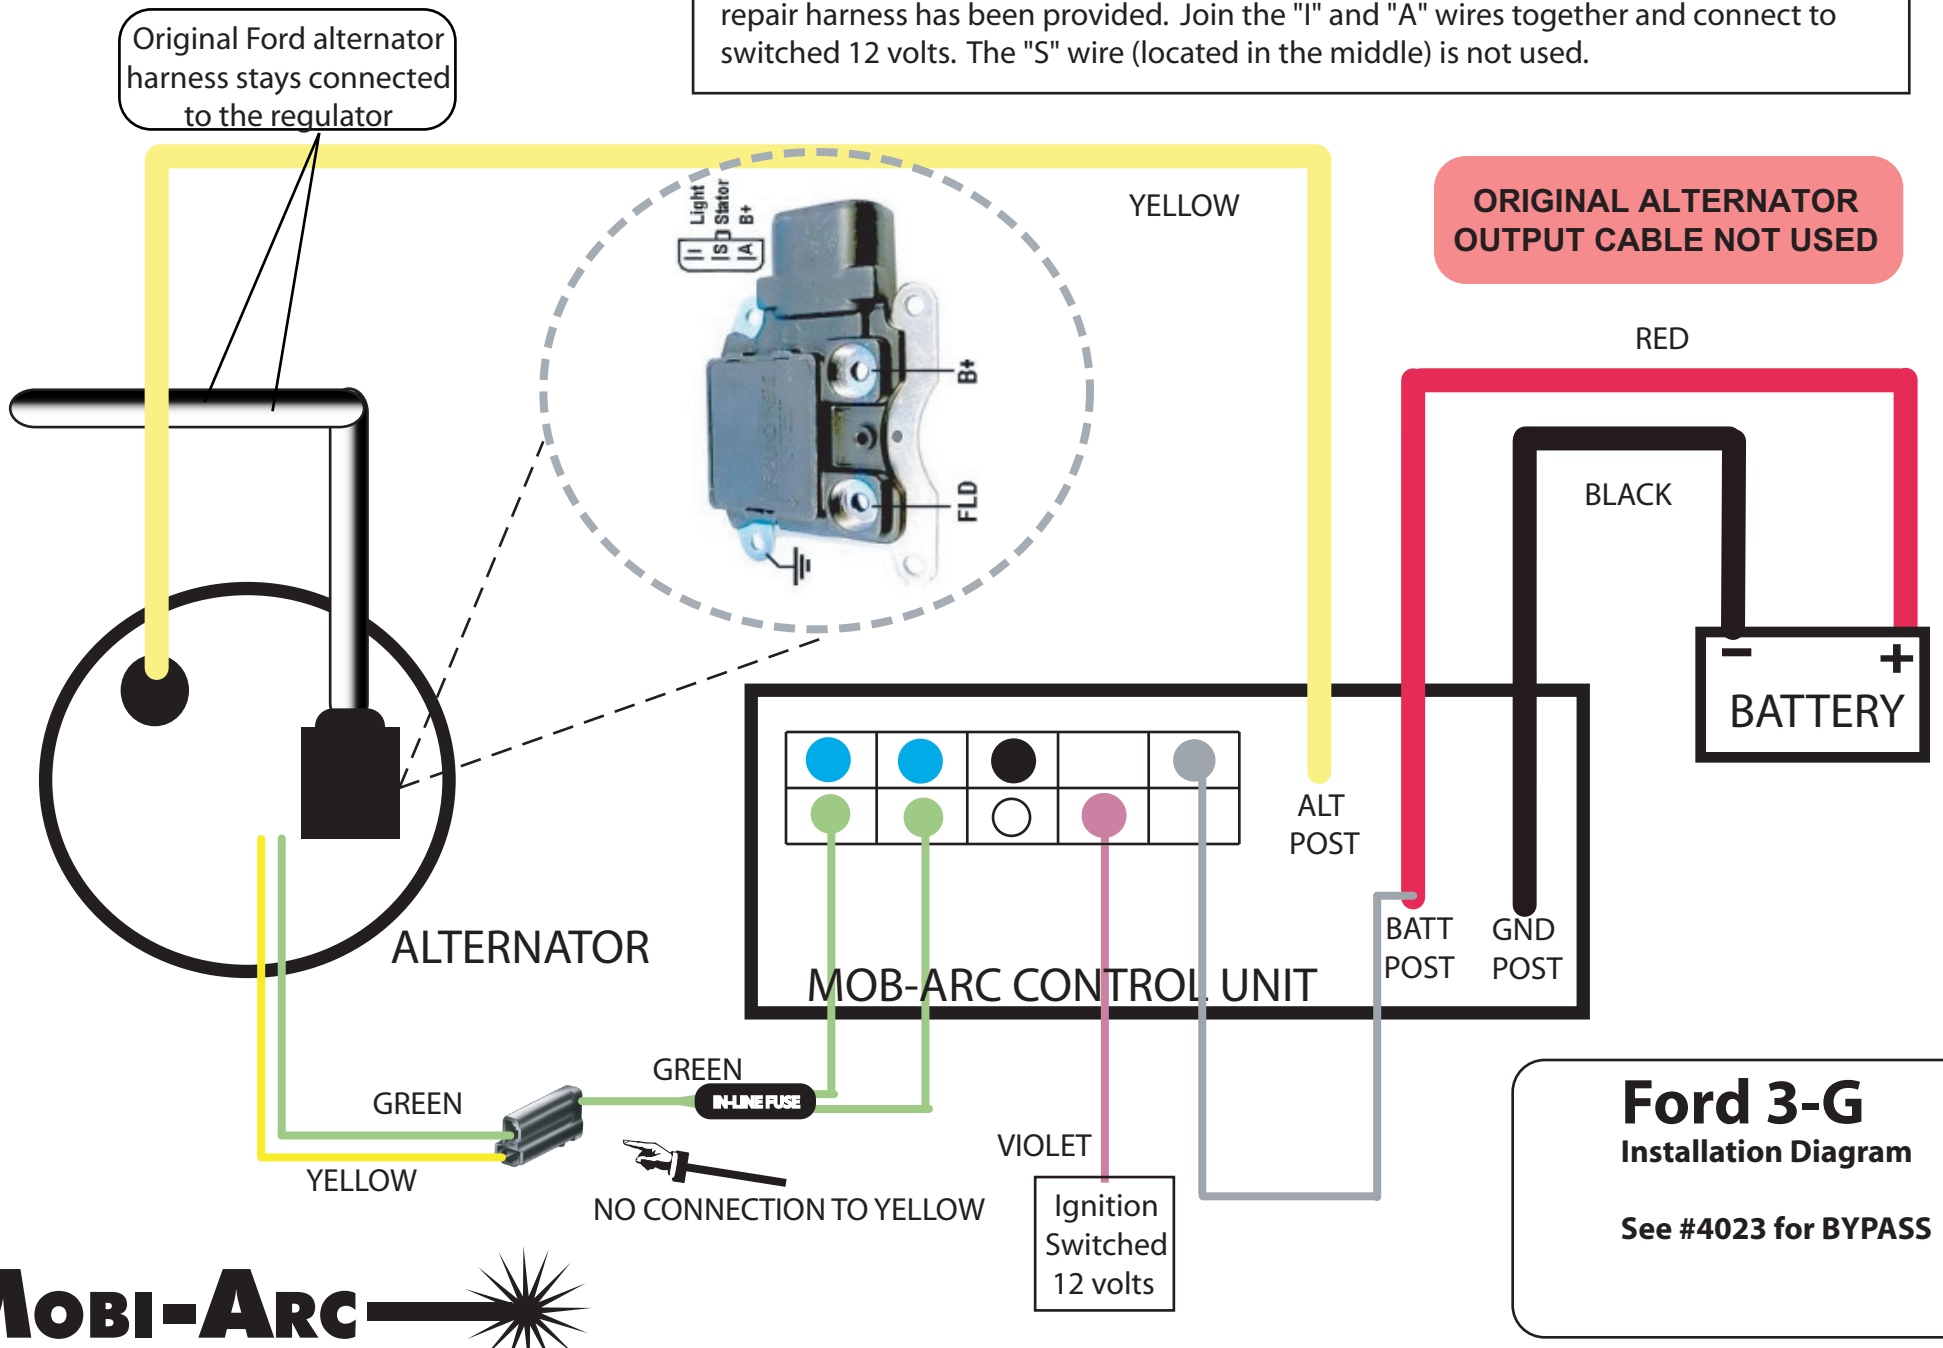

Ford 3-G

Installation Diagram

See #4023 for BYPASS

MOBI-ARC